


01 STEP SUPPORT

NOTES

1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
 2. PART IS TO BE CNC MACHINED USING DRAWING AS A TEMPLATE.
 3. THOROUGHLY DEGREASE, ALODINE, EPOXY PRIME AND POLYURETHANE PAINT ALL ALUMINUM PARTS.
ALTERNATE: THOROUGHLY DEGREASE AND POWDER COAT ALL ALUMINUM PARTS.
ALTERNATE: ANODIZE ALL ALUMINUM PARTS IN ACCORDANCE WITH MIL-A-8625F, TYPE III.

--- NOTICE ---
THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

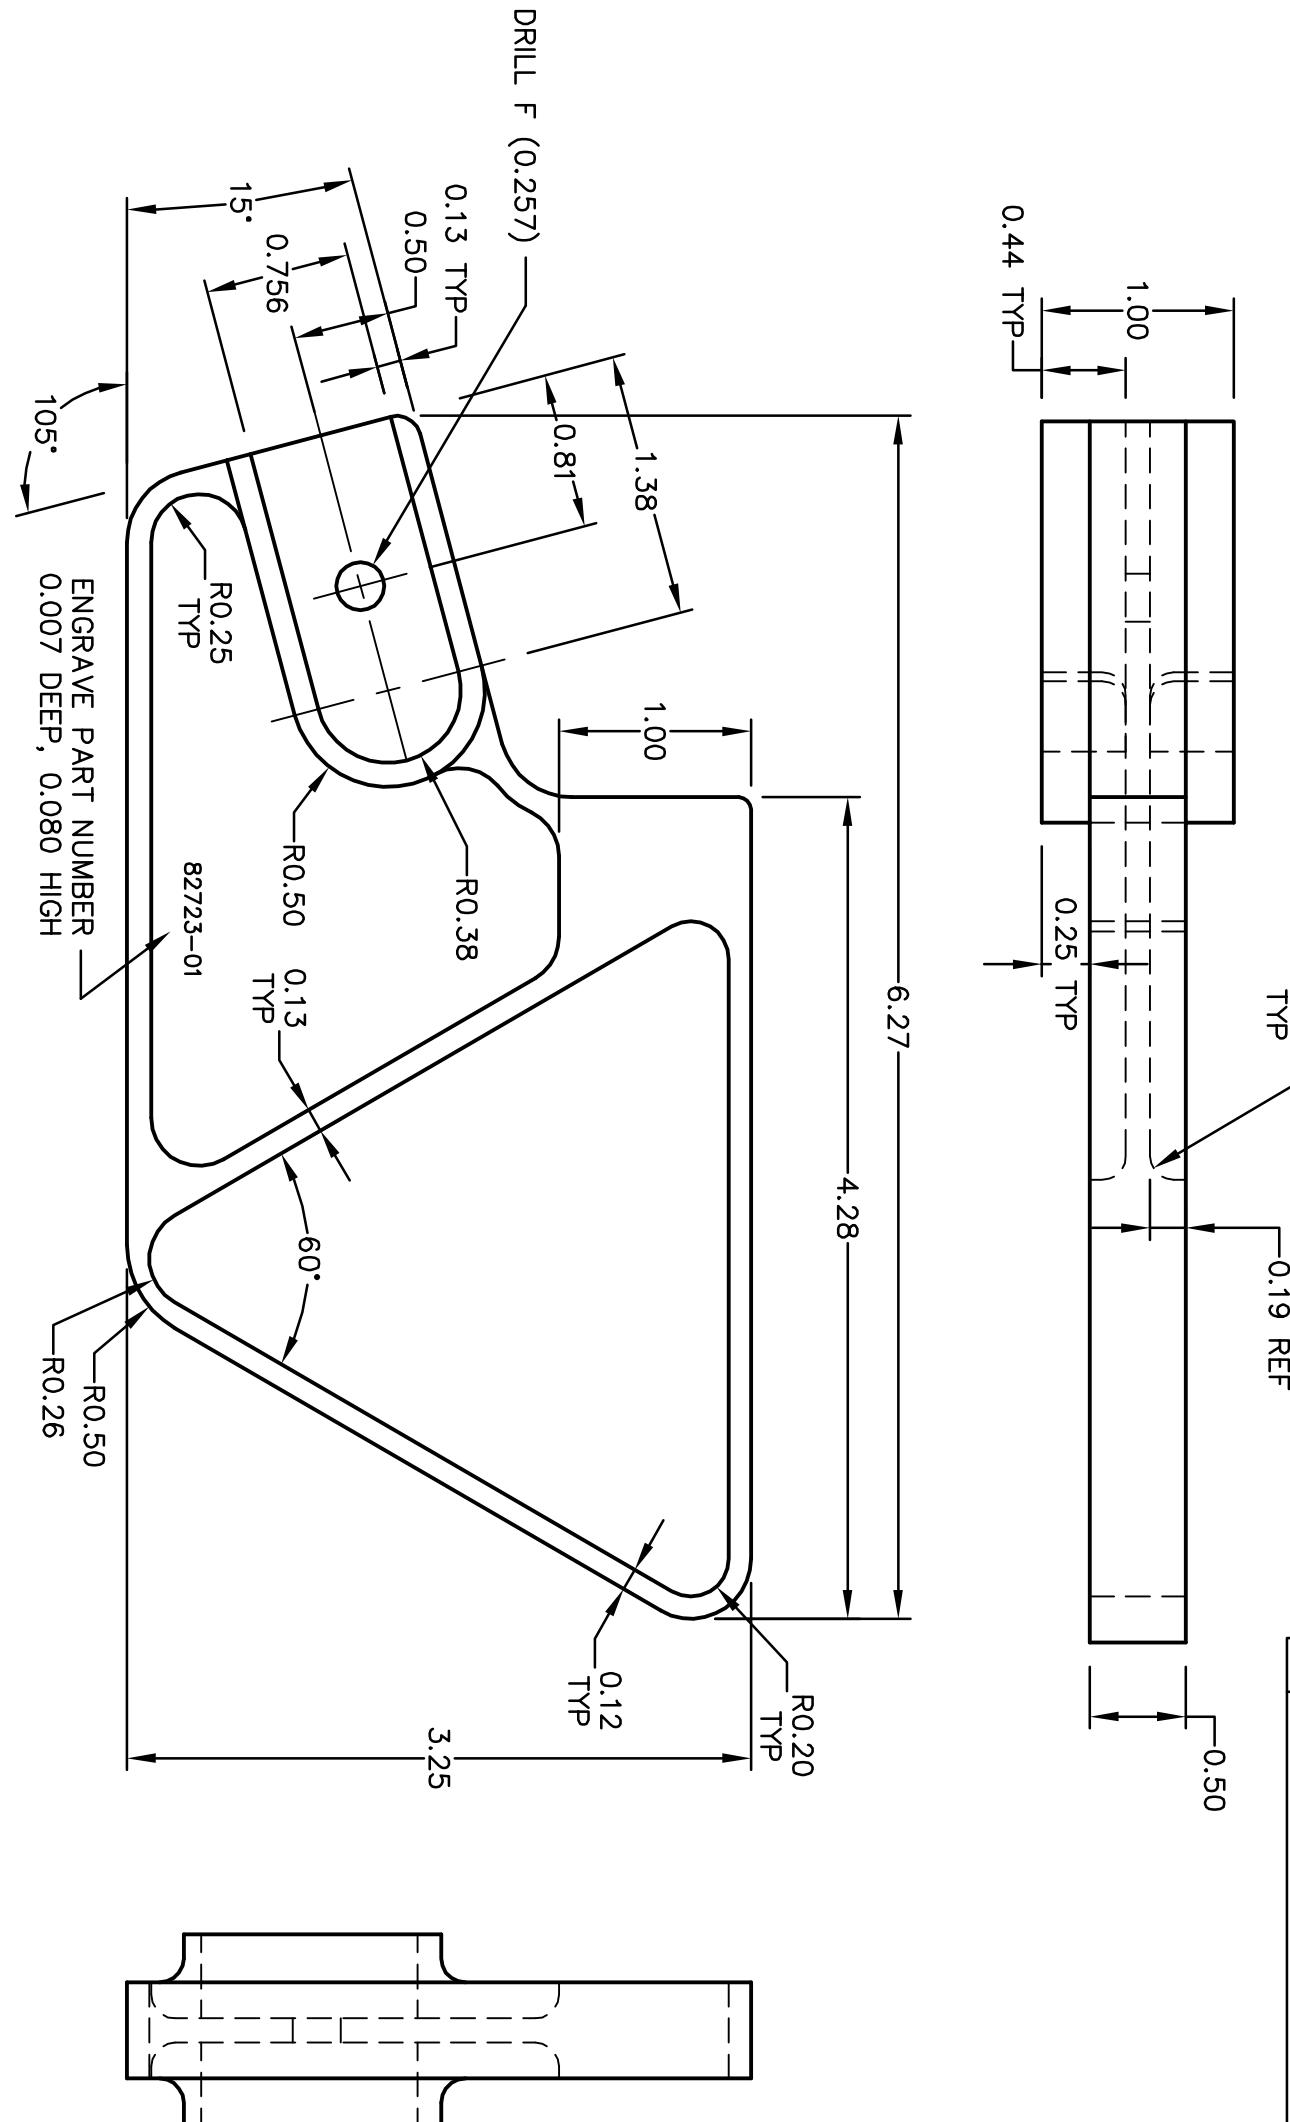

R0.13
TYP
└
0.19 REF

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	THICKNESS REDUCED	BJC	29/11/2012
2	TITLE BLOCK UPDATED	BJC	18/07/2014